



# SERIES BV 6500L

TECHICAL INFORMATION

# INSTALL GUIDE


## BASE MOUNT - BV 6500L

1



1. Drill, vacuum, insert glue and chemical anchor.

2

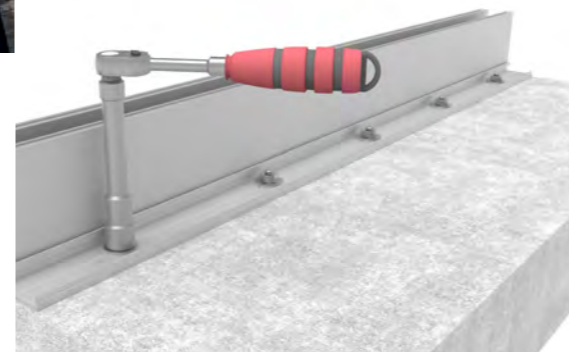


3



3. Place pastic inserts and glass.

4

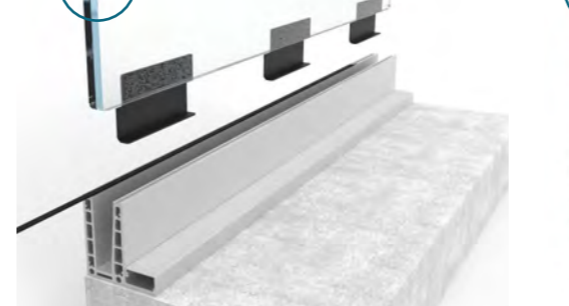

4. Place wedges and secure like shown in the bigger picture.

5




5. Place internal cover and end covers.

6



6. Finished look.

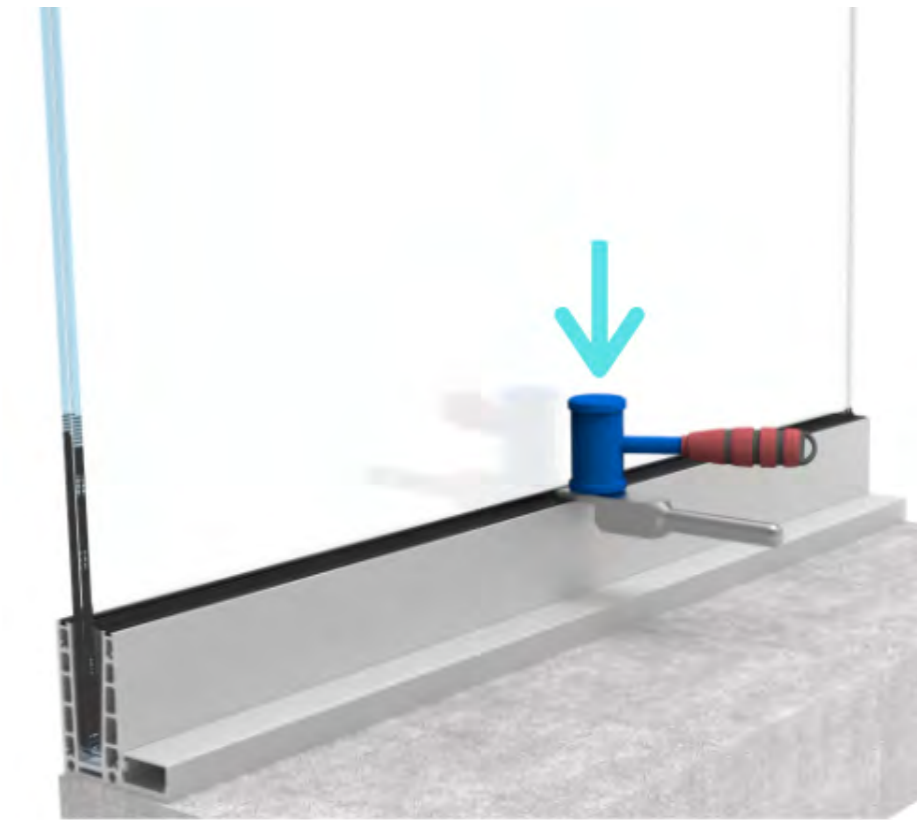

Once all wedges are in place, use wedge inserter and a hammer to insert them until the glass is locked.


Profile

1



Technical drawing


5

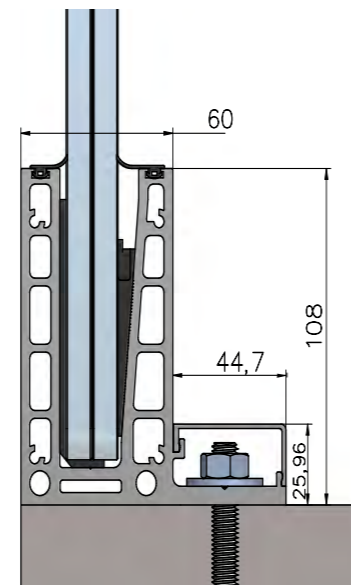

To produce the BV6500L we use the highest quality series of aluminum EN AW 6063, its well known for its extreme strength and elastic resistance designed to work with 16,76-21,52mm glass.

## Components


2

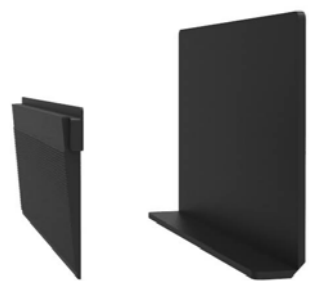

### WEDGE AND PLASTIC INSERT

K6500L-20 (20mm)  
K6500L-16 (16mm)


3

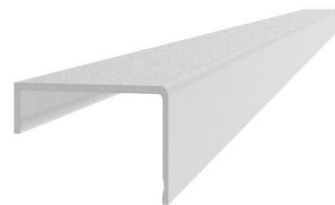

### SIDE COVERS

BV 6501L

4

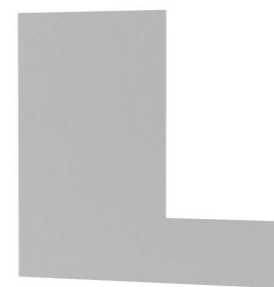

### BEGINING AND END COVER

BV 6501LK